Copyright

Copyright

Fujitsu Limited has made every effort to ensure the accuracy and completeness of this document. However, as ongoing development efforts are continually improving the capabilities of our products, we cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions or future changes.

LifeBook is a trademark of Fujitsu Limited.

Microsoft, Windows, MS, MS-DOS, Windows NT, Windows XP, Windows Vista and Windows 7 are registered trademarks of the Microsoft Corporation of the United States in the United States and other countries.

Phoenix is a registered trademark of Phoenix Technologies Corporation of the United States.

ExpressCard™ module technology is a registered trademark of Personal Computer Memory Card International Association.

Copyright© 1981-1999 Microsoft Corporation, All rights reserved.

Copyright@1999 Phoenix Technologies, Ltd., All rights reserved.

Other product names are trademarks or registered trademarks of their respective companies.

© Copyright 2009 Fujitsu Limited. All rights reserved. No part of this publication may be copied, reproduced or translated, without the prior written consent of Fujitsu Limited. No part of this publication may be stored or transmitted in any electronic form without the written consent of Fujitsu Limited.

This device complies with Part 15 of the FCC rules. Operations are subject to the following two conditions:

- This device may not be allowed to cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Website: hk.fujitsu.com/pc



IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully. Save these instructions for future reference.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. The product may drop, causing serious damage to the product.
- 6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register or in a built-in installation unless proper ventilation is provided.
- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.

- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
- 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 11. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
- 12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power cord or plug is damaged or frayed.
- b. If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
- e. If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

- 13. CAUTION: When replacing the battery, be sure to install it with the polarities in the correct position. There is a danger of explosion if the battery is replaced with an incorrect type or is mistreated. Do not recharge, disassemble or dispose of in fire. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of the used battery according to the manufacturer's instructions.
- 14. Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, BS1363, ASTA, SS145 certified, rated 10A 250V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).



 Changes or modifications not expressly approved by Fujitsu could void this user's authority to operate the equipment.

FCC NOTICES

Notice to Users of Radios and Television

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet that is on a different circuit than the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device.

Notice to Users of the US Telephone Network*

Your LifeBook notebook may be supplied with an internal modem which complies with Part 68 of the FCC rules. On this notebook is a label that contains the FCC Registration Number and the Ringer Equivalence Number (REN) for this equipment among other information. If requested, the user must provide their telephone company with the following information:

- The telephone number to which the notebook is connected.
- The Ringer Equivalence Number (REN) for this equipment.
- That the equipment requires a standard modular jack type USOC RJ-11C which is FCC Part 68 compliant.
- 4. The FCC Registration Number.

This equipment is designed to be connected to the telephone network or premises wiring using a standard modular jack type USOC RJ-11C which is FCC Part 68 compliant and a line cord between the modem and the telephone network with a minimum of 26AWG.

The REN is used to determine the number of devices that you may connect to your telephone line and still have all of those devices ring when your number is called. Too many devices on one line may result in failure to ring in response to an incoming call. In most, but not all, areas the sum of the RENs of all of the devices should not exceed five (5). To be certain of the number of devices you may connect to your line, as determined by the RENs, contact your local telephone company.

If this equipment causes harm to the telephone network, your telephone company may discontinue your service temporarily. If possible, they will notify you in advance. If advance notice is not practical they will notify you as soon as possible. You will also be advised of your right to file a complaint with the FCC.

This fax modem also complies with fax branding requirements per FCC Part 68.

Your telephone company will probably ask you to disconnect this equipment from the telephone network until the problem is corrected and you are sure that the equipment is not malfunctioning.

This equipment may not be used on coinoperated telephones provided by your telephone company. Connection to party lines is subject to state tariffs. Contact your state's public utility commission, public service commission or corporation commission for more information.

This equipment includes automatic dialing capability. When programming and/or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in off-peak hours, such as early morning or late evening.

FCC rules prohibit the use of non-hearing aid compatible telephones in the following locations or applications:

- All public or semipublic coin-operated or credit card telephones.
- Elevators, highways, tunnels (automobile, subway, railroad or pedestrian) where a person with impaired hearing might be isolated in an emergency.
- Places where telephones are specifically installed to alert emergency authorities such as fire, police or medical assistance personnel.
- Hospital rooms, residential health care facilities, convalescent homes and prisons.
- · Workstations for the hearing impaired.
- · Hotel, motel or apartment lobbies.
- Stores where telephones are used by patrons to order merchandise.
- Public transportation terminals where telephones are used to call taxis or to reserve lodging or rental cars.
- In hotel and motel rooms as at least ten percent of the rooms must contain hearing aid compatible telephones or jacks for plug-in hearing aid compatible telephones which will be provided to hearing impaired customers on request.

DOC (INDUSTRY CANADA) NOTICES

Notice to Users of Radios and Television

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Notice to Users of the Canadian Telephone Network*

The Canadian Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

LifeBook notebooks are supplied with an internal modem which complies with the Industry Canada certification standards for telecommunication network protection and safety requirements. Before connecting this equipment to a telephone line the user should ensure that it is permissible to connect this equipment to the local telecommunication facilities. The user should be aware that compliance with the certification standards does not prevent service degradation in some situations.

Repairs to telecommunication equipment should be made by a Canadian authorized maintenance facility. Any repairs or alterations not expressly approved by Fujitsu or any equipment failures may give the telecommunication company cause to request the user to disconnect the equipment from the telephone line.

The connecting arrangement code for this equipment is CA11A.

* For model with modem only

^{*} For model with modem only



₩ CAUTION-

 For safety, users should ensure that the electrical ground of the power utility, the telephone lines and the metallic water pipes are connected together. Users should NOT attempt to make such connections themselves but should contact the appropriate electric inspection authority or electrician. This may be particularly important in rural areas.

UL Notice

This unit requires an AC adapter to operate. Use only UL Listed Class 2 adapter, output rating 19VDC, 4.22A. Refer to the illustration below for the correct AC Adapter output polarity.





₩ CAUTION-

 To reduce the risk of fire, use only #26 AWG or larger telecommunications line cord.

For Authorized Repair Technicians Only



MCAUTION-

 For continued protection against risk of fire, replace only with the same type and rating fuse.



♠ WARNING_

 Danger of explosion if Lithium (CMOS) battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.

Proper Disposal of Battery

Under federal, state or local law, it may be illegal to dispose of batteries by putting them in the rubbish bins or trash cans. Please take care of our environment and dispose of batteries properly. Check with your local government authority for details regarding recycling or disposing of unwanted batteries.

NOTE ON USE REQUIRED HIGH SAFETY

This product is designed and manufactured for general use, including general office use, personal use, household use and ordinary industrial use.

This product is not designed for or intended for use under dangerous (fatal) conditions, unless extreme safety precautions are implemented.

Do not use this product without implementing high-level safety precautions.

Failure to follow this warning may result in death, personal injury, severe physical damage or other loss, if used in or near any or more of the following:

- nuclear reaction control system in a nuclear facility
- automatic flight control system in an airplane or other flight control system
- · mass transport control system
- · medical instruments for life support system
- · missile launching control for weapon system

NOTE ON BACKUP DATA

Please make a backup of the Operating System, any software programs, and created files (and update regularly).

If you send this product to Fujitsu, or any of its affiliates, suppliers, service providers or resellers for repair, Fujitsu does not guarantee the data integrity. It is your responsibility to back data up beforehand.

Fujitsu does not assume any obligation for compensation for damages, data integrity, or restoration, etc., if your data is lost for any reason, except as written in the warranty.

NOTE: Modem setting in Windows Vista*/Windows 7

A. If you are located in Australia

- Click Start select Control panel select "Phone and Modem Options".
- Choose "Australia" in What Country/ region are you in now? pull down menu har
- 3. Select Phone system as "Tone Dialing".
- 4. Click OK.



* For model with modem only

B. If you are located in New Zealand

- Click start select Control panel select "Phone and Modem Options".
- Choose "New Zealand in What Country/ region are you in now? pull down menu har
- 3. Select Phone system as "Tone Dialing".
- 4. Click OK.



NOTE:

The screens and illustrations shown in this examples may slightly vary depending on the operating environment that you have installed.


Table of Contents

NAMES OF THE PARTS	
AND THEIR FUNCTIONS	1
Front features of the notebook	1
Exterior features: Front view	
of the notebook	
Exterior features: Side view	4
Exterior features: Bottom view of the notebook	6
Exterior features: Rear view	
of the notebook	7
STATUS INDICATOR LED	8
Num Lock Indicator	8
Caps Lock Key	
Scroll Lock Indicator	
Power Indicator	
Battery Charging Indicator	
Battery Level Indicators	
Disk Drive Access Indicator	8
RUNNING THE NOTEBOOK	
ON ITS BATTERY	
Recharging the battery	
Running the notebook on its battery	
Checking the power level of the battery	
Low battery condition	
POWER MANAGEMENT	
POWER SOURCES	17
Connecting the Power Adapter	
Power On	18
Power Off	18
CHANGING THE INTERNAL BATTERY PACK	19

ADDING MEMORY MODULE	20
Where to install memory module	20
Preparing necessary items	20
nstalling memory module	20
Checking the memory capacity	22
Changing memory module	22
CLEANING OF AIR-COOLING DUCT	24
	~
TROUBLESHOOTING	26
TROUBLESHOOTINGdentifying the ProblemSpecific Problems	26
dentifying the Problem	26

NOTE:

A copy of LifeBook User's Manual is located in your Microsoft Windows OS or you can find it in Fujitsu's website at http:hk.fujitsu.com/pc. You can use this LifeBook User's Manual to find out more information about the functions and features of your notebook.

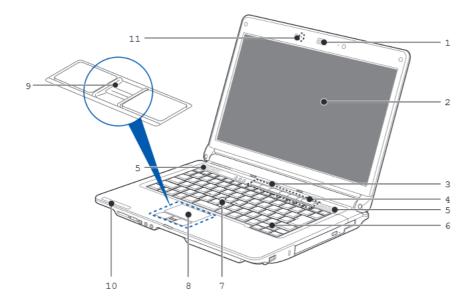

(This picture is for illustration purpose only and may look different from the actual unit)

NAMES OF THE PARTS AND THEIR FUNCTIONS

Front features of the notebook

- 1. 1.3 Mega Pixels Camera
 The location of the built-in camera.
- 2. LCD Panel
 The display screen of the notebook.
- LifeBook Application Panel
 The LifeBook application panel provides one-touch application launch capability.

POINT

- The phenomena described below are characteristics of LCD panels and do not indicate that LCD panels are defective.
 - The TFT color LCD screen of your notebook, composes of more than 2,350,000 picture elements (number of dots when the screen resolution is set at 1366 by 768 pixels). It was manufactured using advanced technologies. For technical reasons, LCD screen may have pixels that do not light and pixels that are always lit.
 - LCD panels may display slight varying colors and uneven density.

4. Power and Suspend/Resume Button

This button allows you to power on or off the notebook. You can use also this button to suspend notebook activity without turning off the power to it and to resume the notebook from suspend mode.

Speakers

The built-in dual speakers provide stereo

6. Spill Resistant Keyboard

A full-function keyboard with dedicated Windows keys.



MARNING-

Spill resistant keyboard does not imply the keyboard is water-proof. If liquid is spilled onto the keyboard, power off your notebook immediately and turn the notebook upside down to drain off the liquid.

7. Quick Point*

It offers an additional method to move the display cursor (mouse pointer).

* For model with Quick Point

8. Touch Pad

It allows you to control the display cursor (mouse pointer).

9. Fingerprint Sensor or Scroll Buttons

Your notebook may be equipped with either Fingerprint Sensor or Scroll Buttons.

The Fingerprint Sensor provides an alternative way for Windows logon authentication and homepages logonauthentication. Please refer to the section on "Using Fingerprint Authentication" for more details.

The Scroll Buttons allow you to scroll up and down a document.



POINT-

 
Some applications may not allow you to scroll up and down a document.

10. Status Indicator LED

This indicator displays operating status symbols that correspond to specific components of your notebook.

11. Internal Microphone

It allows you to record the sounds and voice in monaural manner.



(This picture is for illustration purpose only and may look different from the actual unit)

Exterior features: Front view of the notebook

1. SDHC/SD/MS/MS PRO Card Slot

The SDHC/SD/MS/MS PRO Card slot allows you to install a flash memory card for data storage. This architecture allows you to transfer data from a variety of different digital devices, such as SD card, Memory Stick and Memory Stick PRO media.

Wireless LAN/ Bluetooth ON/OFF Switch

The switch allows you to turn on and off the Wireless LAN/ Bluetooth communications. Slide the switch to the right to turn it on, or slide the switch to the left to turn it off.

Remember to off this switch where the use of electronic devices is restricted, for example, in hospitals and on airplanes.

Turn off this switch if you intend to carry your notebook around. If you set your notebook in standby mode with this switch on, the notebook may resume operation unexpectedly when it is carried around. This may damage the hard disk.

3. IEEE 1394 (DV) Port

You can use this port to connect to a multimedia device with an IEEE 1394 (DV) port such as a digital video camera.

4. HDA-Out

It allows jack sensing of the following audio output devices.

Headphone


It allows you to connect a Ø3.5mm headphone to it. There are commercially available headphones with different types of connector. Please check the compatibility of these headphones before purchase.

5. HDA-In

It allows jack sensing of the following audio input devices.

Microphone

It allows you to connect a Ø3.5mm mono or stereo microphone to it.

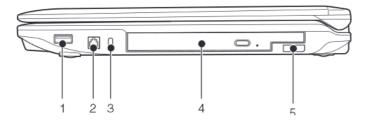

(This picture is for illustration purpose only and may look different from the actual unit)

Exterior features: Side view

Right view of the notebook

1. USB 2.0 Ports

The USB 2.0 port allows you to connect Universal Serial Bus devices. USB 2.0 devices transfer data at up to 480Mbps and is backward compatible with USB 1.1 devices, which transfer data at up to 12Mbps.

2. Modem (RJ-11) Port*

It allows you to connect your notebook internal modem to a phone line socket using a supplied RJ-11 cable.

* Configuration depends on model

3. Anti-theft Lock Slot

It allows you to attach an optional physical lock down device.

4. Modular Bay Device

 
Your notebook has a mutli-purpose bay installed with a hot-swappable bay device. The installed bay device varies between country configurations. Please check with your local distributor for actual bundling. The bay device is hot-swappable because you can take out or install a bay device without power on or off the notebook. You may change the installed bay device with other bay device options. These are sold separately.

廖 IMPORTANT

- If this LifeBook come with an optical drive that can read DVD titles, then this drive is pre-set at factory to read DVD titles with region codes for specific Asia Pacific markets (e.g. code 3 for Asian, code 4 for Australia, code 6 for China).
- The first time you play a DVD title with a region code different from that of the DVD optical drive - the region code set at factory, you will be prompted to change the region code of the DVD optical drive. The region code of a DVD optical drive can be changed up to 4 times, after which it will be locked so that the DVD optical drive can only play DVD titles of the final region code set.

5. Modular Bay Eject Lever

The Modular Bay eject lever releases the Modular Bay device.



(This picture is for illustration purpose only and may look different from the actual unit)

■ Left view of the notebook

1. DC-IN Jack

You plug in the supplied AC adapter into this port to power your notebook and charge the battery.

2. External Monitor Port

The external monitor port allows you to connect an external display monitor.

3. Air Vents

The air vents are used to cool the system to prevent overheating



W CAUTION-

Do not obstruct the air vents while the system is running; doing so could cause your system to overheat.

4. Display Port

You can use this port to connect to a TV with DisplayPort for high quality video output. The DisplayPort supports both video and audio output.

5. eSATA Port

This ia an external interface for SATA technologies, providing fast data transfer speeds for external storage devices (e.g. external hard drives.


6. USB 2.0 Ports

The USB 2.0 port allows you to connect Universal Serial Bus devices. USB 2.0 devices transfer data at up to 480Mbps and is backward compatible with USB 1.1 devices, which transfer data at up to 12Mbps.

7. ExpressCard™ Slot

It allows you to connect ExpressCard™ module.

There are two sizes of Express Card™ module. One is 34mmwide (ExpressCard™/34) and the other is 54mm wide (ExpressCard™/54). This LifeBook can support both sizes of ExpressCard™ accessory.

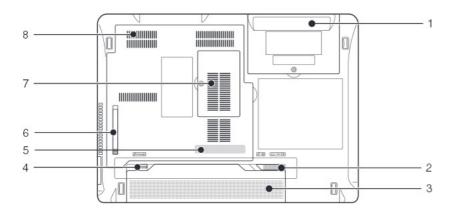

(This picture is for illustration purpose only and may look different from the actual unit)

Exterior features: Bottom view of the notebook

1. Internal Hard Disk Drive

The location of the internal hard disk drive.

2. Battery Bay Lock Latch

This latch secures the battery pack in the battery bay.

3. Internal Battery Pack Bay

The location of the internal battery pack.

4. Battery Release Latch

Slide and hold this latch before sliding the Battery Bay Lock Latch to unlock the battery.

5. Port Replicator Connector*

This connector allows you to connect the optional port replicator to your notebook.

* Configuration depends on model.

6. Dust Catcher

The dust catcher traps dust and dirt from entering your notebook.

7. Expansion RAM Module Slot


The location of the expansion memory slot.

8. Air Vents

The air vents are used to cool the system to prevent overheating.

CAUTION

Do not obstruct the air vents while the system is running; doing so could cause your system to overheat.

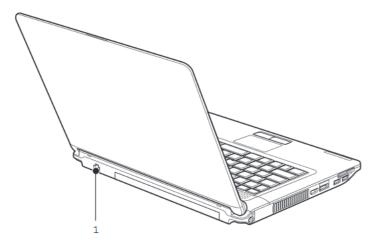


(This picture is for illustration purpose only and may look different from the actual unit)

Exterior features: Rear view of the notebook

1. LAN (RJ-45) Port

This port allows you to connect to a LAN (local area network) using an optional LAN cable. The port is compatible with 1000/100/10 Base-T networks.

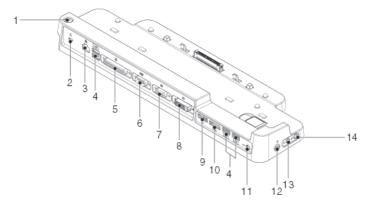

(This picture is for illustration purpose only and may look different from the actual unit)

PORT REPLICATOR*

The port replicator is an optional item. It may be bundled in certain country configurations. Please check the country configurations with your local distributor.

* Configuration depends on model.

Port replicator back panel

The following is a brief description of the port replicator back panel components.

1. Power and Suspend/Resume Button

This button allows you to power on or off the notebook. You can also use this button to suspend notebook activity without turning off the power to it and to resume the notebook from suspend mode.

2. Anti-theft Lock Slot ①

It allows you to locked the notebook and the port replicator.

 To lock only the port replicator without locking the docked notebook, please use anti-theft lock slot ② with an optional physical lock down device.

3. Lan (RJ-45) Connector

The LAN port allows you to connect a LAN (RJ-45).

Note that when your notebook is docked on the port replicator, the LAN port on the LifeBook is not accessibale. The port replicator LAN port should be used to connect to network resources when the LifeBook is docked on the port replicator.

4. USB 2.0 Ports

The USB 2.0 ports allow you to connect Universal Serial Bus devices. USB 2.0 devices transfer data at up to 480Mbps and is backward compatible with USB 1.1 devices, which transfer data at up to 12Mbps.

5. Parallel Port

The parallel port allows you to connect paralle devices.

6. Serial Port

The serial port allows you to connect serial devices

7. External VGA Port

The external VGA port allows you to connect an external display or CRT monitor.

8. Digital Video Interface (DVI-D)

The DVI-D port allows you to connect a flat-panel LCD display or television that is equipped with a DVI-D port for ultra-crisp digital images and graphics.

9. Display Port

You can use this port to connect to a TV with DisplayPort for high quality video output. The DisplayPort supports both video and audio output.

10. eSATA Port

This ia an external interface for SATA technologies, providing fast data transfer speeds for external storage devices (e.g. external hard drives.

11. DC Power Connector

The DC power jack allows you to plug in the AC Adaptor to power on your notebook.

12. Anti-theft Lock Slot ②

It allows you to lock only the port replicator.

13. Headphone Jack

The headphone jack allows you to connect a headphone or external speakers.

廖 IMPORTANT -


 Certain peripheral devices connected to the port replicator may operate in an unstable manner if the port replicator is installed/removed when the LifeBook power is on. If this happens, switch off the LifeBook power prior to installing/ removing the port replicator.

14. Microphone Jack

It allows you to connect an external mono microphone.

Port replicator front panel

The following is a brief description of the port replicator front panel components.

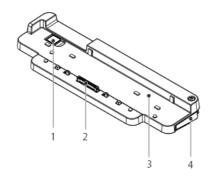

1. Guide Bar Release Latch

Slide latch to release guide bar.

2. Port Replicator Interface


This interface connects the port replicator to your notebook.

3. Guide Bar

The guide bar allows you to use the port replicator with another LifeBook model.

4. Release Lever

You can pull out the port replicator lever to remove your notebook from the port replicator.

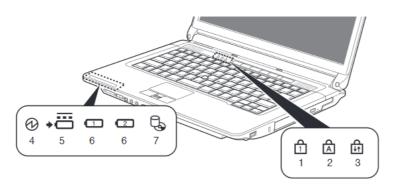

(This picture is for illustration purpose only and may look different from the actual unit)

STATUS INDICATOR LED

1. Num Lock Indicator (11)

This indicator lights up when the keyboard is locked in Num Lock mode. (You can use the keyboard as a ten-digit keyboard when the Num Lock mode is turned on).

You can toggle the Num Lock mode by using the [Num Lk] key.

2. Caps Lock Key (△)

You can toggle the Caps Lock mode by using the [CapsLock] | key.

3. Scroll Lock Indicator (111)

This indicator turns on when the lock mode is turned on.

4. Power Indicator (♠)

This indicator turns on when there is power to the notebook.

It turns off when the notebook is powered off. This indicator will blink if the notebook is put in suspend mode.

5. Battery Charging Indicator (→ ===)

This indicator turns on when internal battery is being charged.

Battery Level Indicator (□ □)

The standard Battery Level Indicator state the presence of stardard Li-ion battery. The indicator show the remaining power of the battery.

7. Disk Drive Access Indicator (♣)

This indicator turns on when an internal hard disk drive or built-in optical disk drive is being accessed.



POINT-

 Do not power off the notebook when the disk drive access indicator is shown.
 Failure to do so corrupt data on the disk as well as the installed operating system.

RUNNING THE NOTEBOOK ON ITS BATTERY

Recharging the battery

Connect the AC adapter to your notebook.

The moment you connect an AC adapter to your notebook, the notebook begins to charge the internal standard battery pack.

 When the battery level indicator turns off after the battery is completely charged, (while the notebook is in off mode) disconnect the AC adapter from the notebook.



POINT_

- Before using the supplied battery pack for the very first time after purchase, remember to charge it fully. If a charged battery has not been recharged for more than a month, charge it fully before using it.
- When the battery is fully charged while the notebook is in power off mode, the Battery Level LED indicator turns off.




POINT-

- When the battery is 90% or more charged, it cannot be recharged even if the AC adapter is connected. The battery can be recharged when its power level (i.e. remaining battery life) is 89% or less.
- When a notebook is turned off, the Battery Level LED indicator goes off immediately if the battery is completely charged.
- The chargeability of the battery degrades when it is used in an extremely hot or cold place.
- When the battery is very hot, for example, immediately after long usage of the notebook, the battery protection feature may be activated to prevent the battery from being recharged. When the temperature decreases, the notebook automatically begins to charge the battery.
- When an optional modular bay battery is installed, it is charged along with the internal standard battery. (Optional modular bay battery is applicable to selected models only.)

Running the notebook on its battery

This section describes the steps to run the notebook on its internal standard battery.

 Disconnect the AC adapter from your notebook and press the power button.

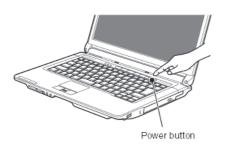

(This picture is for illustration purpose only and may look different from the actual unit)



POINT

- The power level of the battery decreases faster when it is used in a cold place.
- The chargeability of the battery decreases after it has been used over a long period of time. If the battery runs down very fast, replace it with a new battery.

Checking the power level of the battery

Checking the power level of the battery



POINT-

 When the power is turned off, the status display LEDs are all OFF except for during battery charging.

This lamp indicates charging status of built-in battery when AC adaptor is connected to PC.

- Green lamp is lit
 - Charging completed or not charging due to no built-in battery pack installed.
- Orange lamp is lit Charging
- · Orange lamp flashes

Charging stopped (due to battery temperature alarm, etc. [Note 1])

OFF

No charging due to disconnected AC adaptor.

2. Built-in Battery Pack Level Indicator Lamp (2)

This lamp indicates remaining level of the built-in battery pack.

- · Green lamp is lit
 - Remaining battery level: 100% 50% [Note 2]
- Orange lamp is lit

Remaining battery level: 49 – 13% [Note 2]

· Red lamp is lit

Remaining battery level: 12% or below [Note 2]

· Orange lamp flashes

Measuring remaining battery level (for 4 seconds after built-in battery pack is installed)

· Red lamp flashes

Abnormal battery condition.

OFF

Built-in battery pack disconnected.



POINT_

- Due to certain characteristics of Li-ion battery, the Battery Level Indicators may not correctly show the remaining power of the battery, especially under extreme temperature conditions.
- When the battery is 90% or more charged, it cannot be recharged even if the AC adapter is connected to the notebook. The battery can be recharged when its remaing power is 89% or less.

Battery failure alert

When the Battery Level LED indicator is not lit, it indicates that the battery cannot be charged properly.



POINT-

 If the Battery Level LED indicator is not lit, turn off the notebook, remove the battery and reinstall it properly.

Low battery condition

When the battery is discharged to a very low level, the Battery Level LED indicator is lit Red. Immediately, connect the AC adapter to your notebook to recharge the battery.

POINT-

- The use of a weak battery may result in lost of data you are currently working on. When the battery runs low, connect the AC adapter to your notebook as soon as an external power source is available or immediately save the data you are working on, exit all applications and turn off the notebook.
- Accessing data on the hard disk consumes a lot of power. Therefore when the battery is weak, connect an AC adapter to the notebook before accessing data on the hard disk.
- If a battery is weak and there is no system activity, the notebook may go into standby (i.e. suspend) mode. However, if there is system activity, the notebook will go into standby mode only after the system activity has completed its processing.
- The notebook will go into standby mode when the indicator reaches 3%. This is the default setting of the notebook.

NOTE 1:

Battery temperature alarm is to stop charging with battery protection function when temperature of built-in battery pack or extended built-in battery unit becomes too high or too low due to battery heat or cooling down of the battery.

NOTE 2:

Operational status or battery charging.

POWER MANAGEMENT

Your Fujitsu LifeBook notebook has many options and features for conserving battery power. Some of these features are automatic and need no user intervention, such as those for the internal modem. However, others depend on the parameters you set to best suit your operating conditions, such as those for the display brightness. Internal power management for your notebook may be controlled from settings made in your operating system, pre-bundled power management application, or from settings made in BIOS setup utility.

Besides the options available for conserving battery power, there are also some things that you can do to prevent your battery from running down as quickly. For example, you can create an appropriate power saving profile, put your notebook into Suspend mode when it is not performing an operation, and you can limit the use of high power devices. As with all mobile, battery powered computers, there is a trade-off between performance and power savings.

POWER/SUSPEND/RESUME BUTTON

When your LifeBook notebook is active, the Power/Suspend/Resume button can be used to manually put your notebook into Suspend mode. Push the Power/Suspend/Resume button when your notebook is active, but not actively accessing anything, and immediately release the button. You will hear two short beeps* and your system will enter Suspend mode.

If your LifeBook is suspended, pushing the Power/Suspend/Resume button returns your notebook to active operation. You can tell whether the system is Suspended by looking at the Power indicator. If the indicator is visible and not flashing, your notebook is fully operational. If the indicator is visible and flashing, your notebook is in Suspend mode. If the indicator is not visible, the power is off or your notebook is in Hibernation mode. (See Hibernation Feature)

* Only applicable for some models

SUSPEND MODE

Suspend or Standby mode in Windows saves the contents of your LifeBook notebook's system memory during periods of inactivity by maintaining power to critical parts. This mode will turn off the CPU, the display, the hard drive, and all of the other internal components except those necessary to maintain system memory and allow for restarting. Your notebook can be put in Suspend mode by:

- Pressing the Power/Suspend/Resume button when your system is turned on.
- Selecting Standby from the Windows Shut Down menu
- · Timing out from lack of activity.
- Allowing the battery to reach the Dead Battery Warning condition.

Your notebook's system memory typically stores the file on which you are working, open application information, and any other data required to support operations in progress. When you resume operation from Suspend mode, your notebook will return to the point where it left off. You must use the Power/Suspend/Resume button to resume operation, and there must be an adequate power source available, or your notebook will not resume.

月

IMPORTANT -

- If you are running your LifeBook notebook on battery power, be aware that the battery continues to discharge while your notebook is in Suspend mode, though not as fast as when fully operational.
- Disabling the Power/Suspend/Resume button prevents it from being used to put your LifeBook notebook in Suspend or Hibernation (Save-to-Disk) mode. The resume function of the button cannot be disabled.

- The Suspend or Hibernation (Save-to-Disk) mode should not be used with certain PC Cards. Check your PC Card documentation for more information. When PC Cards or external devices are in use, Hibernation (Save-to-Disk) mode cannot return to the exact state prior to suspension, because all of the peripheral devices will be re-initialized when the system restarts.
- If your LifeBook notebook is actively accessing information when you enter the Suspend or Hibernation (Save-to-Disk) mode, changes to open files are not lost. The files are left open and memory is kept active during Suspend mode or the memory is transferred to the internal hard drive during Hibernation mode.
- The main advantage of using the Hibernation (Save-to-Disk) function is that power is not required to maintain your data. This is particularly important if you will be leaving your LifeBook notebook in a suspended state for a prolonged period of time. The drawback of using Hibernation mode is that it lengthens the power down and power up sequences and resets peripheral devices.

HIBERNATION (SAVE-TO-DISK) FEATURE

The Hibernation feature saves the contents of your LifeBook notebook's system memory to the hard drive as a part of the Suspend/Resume mode. You can enable or disable this feature.

Enable or Disable the Hibernation Feature

Windows 7:

The default settings are not enabled. To enable or disable the Hibernation feature follow these steps:

- 1. From the Start menu, select Control Panel.
- 2. Select "System and Security", and then select "Power Options".
- Select "Choose what the power button does" or "Choose what closing the lid does", then

make your selections (Do Nothing, Sleep, Hibernate, or Shut Down).

Windows Vista:

The default settings are not enabled. To enable or disable the Hibernation feature follow these steps:

- 1. From the Start menu, select Control Panel.
- Select "Choose what the power button does" or "Choose what closing the lid does", then make your selections (Do Nothing, Sleep, Hibernate, or Shut Down).

Windows XP:

The default settings are not enabled. To enable or disable the Hibernation feature follow these steps:

- From the Start menu, select Settings, and then select Control Panel.
- From the Control Panel select Power Options.
- Select the **Hibernate** tab. Select the box to enable or disable this feature.

WINDOWS POWER MANAGEMENT

The Power Options icon located in the Windows Control Panel allows you to configure some of the power management settings. For example, you can use the Power Options to set the timeout values for turning off the display and hard disks whether you are running the notebook on battery power or one of the adapters.

RESTARTING THE SYSTEM

If your system is on and you need to restart it, be sure that you use the following procedure.

Windows Vista/Windows 7

If your system is on and you need to restart it, be sure that you use the following procedure.

- Click the Start button, and then move the mouse over the right arrow.
- 2. Select the desired action from the list.

Windows XP

- Click the Start button, and then click Shut Down.
- Select the **Restart** option from within the Windows Shut Down dialog box.
- Click OK to restart your notebook. Your notebook will shut down and then reboot.



Turning off your LifeBook notebook without exiting Windows or turning on your notebook within 10 seconds of the notebook being shut off may cause an error when you start the next time.

POWER OFF

Before turning off the power, check that the hard drive/ optical drive access indicator is off. If you turn off the power while accessing a disk there is a risk of data loss. To ensure that your notebook shuts down without error, use the Windows shut down procedure.




Be sure to close all files, exit all applications, and shut down your operating system prior to turning off the power. If files are open when you turn the power off, you will lose any changes that have not been saved, and may cause disk errors.

Using the correct procedure to shut down from Windows allows your notebook to complete its operations and turn off power in the proper sequence to avoid errors. The proper sequence is:

- Click the Start button, and then click Shut Down.
- Select the Shut Down option from within the Windows Shut Down dialog box.
- 3. Click OK to shut down your notebook.

If you are going to store your notebook for a month or more see Care and Maintenance Section.

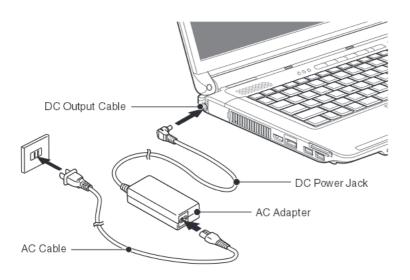

POWER SOURCES Connecting the Power Adapter

The AC adapter provides power for operating your notebook and charging the batteries.

Connecting the AC Adapter

- Plug the DC output cable into the DC power jack on your notebook.
- 2. Plug the AC adapter into an AC electrical outlet.

A P

POINT-

The Li-ion battery is not charged at the point of purchase. Remember to connect an AC adapter to your notebook to charge it when you use it for the first time.

Power On

Power/Suspend/Resume button

You can use the Power/Suspend/Resume button to turn on your notebook. Once you have connected an AC adapter to the notebook or charged the internal Lithium ion battery, you can power on your notebook.



POINT-

When you turn on your notebook, be sure you have a power source connected to it. This means that at least one battery is installed and charged or that the AC adapter is connected and has power.

You can press the Power/Suspend/Resume button to turn off the notebook. After you have finished working on the notebook, you can either leave it in Standby (i.e. suspend) mode or turn it off.



₩ CAUTION_

Do not carry the notebook around when it is still power on. Do not subject the notebook to shocks and vibrations. Failure to do so may damage the notebook.

When you power on your notebook, it will perform a Power On Self Test (POST) to check the internal parts and configuration for normal functionality. If an error is found, your notebook will emit an audio warning and/or show an error message.

After satisfactory completion of the Power On Self Test (POST), your notebook will load your operating system.

Power Off

Before turning off the power, check that the Hard Disk Drive Access and Optical Disk Drive Access indicators are off. If you power off the notebook when it is accessing the disk drives, data may be lost or corrupted. To power off the notebook, always shut down the notebook properly using the Windows shutdown procedure.



∤ CAUTION _

Remember to close all files, exit all applications and shut down the operating system prior to turning off the power using the power button. If documents are opened when the notebook is turned off, data may be lost and this may result in disk errors.

Remember to use the correct procedure to shut down the notebook. The proper procedure is:

- Click the Start button and then click Shut Down or turn Off notebook.
- Select the Shut Down option from within the Shut Down Windows dialog box.
- 3. Click OK to shut down your notebook.

CHANGING THE INTERNAL BATTERY PACK

M WARNING -

 Before changing the internal battery pack, turn off the notebook and disconnect the AC adapter from it. To avoid shock hazards and damage to your notebook, be careful not to touch internal components of the notebook. including the battery connector.

Changing the internal battery pack

- 1. Turn off the notebook and disconnect the AC adapter from it.
- 2. Close the LCD panel and place your notebook upside down.




∅ IMPORTANT-

 Close the LCD panel gently. Do not exert excessive pressure to it. Failure to do so may damage the LCD panel.


3. Remove the battery pack.

While pressing the latches that lock the battery, push the battery outwards in the direction of the arrow as shown.

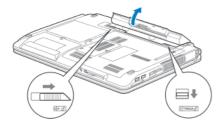

4. Install a new battery pack.

Press the latches on the battery pack and align it to fit into the battery compartment of the notebook. When the battery falls in place, push the battery inwards as shown and release the latches.

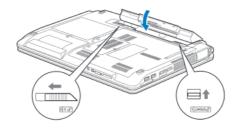

№ IMPORTANT

After removing the internal battery pack, please take necessary precautions to prevent it from being shorted. For example, you can seal the connector ends with insulating tape. After removing the battery pack, do not mix it with other types of battery.

The internal battery pack contains recycle material.

ADDING MEMORY **MODULE**

Where to install memory module


Your notebook has an expansion RAM module slot (slot 2) to add in one additional memory module

The memory capacity of the notebook can be increased to a maximum of 4 GB (2048 MB x 2).

Preparing necessary items

Philips screwdriver

Use a screwdriver of appropriate size to remove the screws on the cover. Failure to do so may damage the head of the screws.

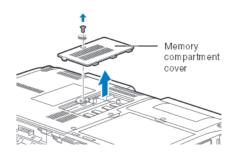

* To locate the position of the Expansion RAM Module Slot, please refer to page 6.



POINT-

 Memory Module Configuration Table. The table below shows combinations of memory that can be installed on your notebook.

The installation of any combination of memory other than the combinations shown below can impair the functioning of your notebook

Total capacity	Slot 1	Slot 2	Remarks
1 GB	1 GB		DDR3 1066MHz
2 GB	1 GB	1 GB	Dual Channel DDR3 1066MHz
2 GB	2 GB		DDR3 1066MHz
4 GB	2 GB	2 GB	Dual Channel DDR3 1066MHz

This LifeBook is capable of operating in dual channel memory mode. To realize the full performance benefits of dual channel operations, we recommend you upgrade memory module using Fujitsu memory module such that the two memory modules in the memory slots are of the same capacity and specification.

Installing memory module

To install memory, perform these steps.



♠ WARNING_

- Before installing any memory module, remember to power off the notebook and disconnect the AC adapter from it.
- Keep small objects, such as a cover, caps and screws, out of the reach of babies and children. These small objects may suffocate a baby or child if they are swallowed accidentally. Should such an accident happen, consult a doctor immediately.



₩ CAUTION-


Certain components around the memory slots are very hot when the notebook is powered on for a long period of time.

To avoid possible burns, do not install or remove memory module immediately after turning off the notebook but wait for a while until its internal components cool down.

A CAUTION-


- To install or remove a memory module, hold it by the edge and be careful not to touch any component and IC.
- Memory module is made of materials sensitive to human body static charges.
 Before handling a memory module, always touch an appropriate metal object to discharge static charges from your body.
- Please remember to turn off the notebook before you begin to install or remove a memory module. If the notebook is placed in standby or hibernate mode while the memory is removed, data may be lost or corrupted. This may also damage the memory module.
- Turn off the notebook and disconnect the AC adapter from it.
- Close the LCD panel and place the notebook upside down.
- Remove the screw(s) securing the memory compartment slot cover and remove it.

Remove the battery compartment cover at the bottom of the notebook.

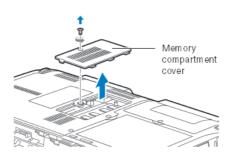


4. Install the memory module

Insert the memory module into the slot with the notch in the memory module aligned with the projection on the connector, and push the memory module down unit it locks in place with a click sound.

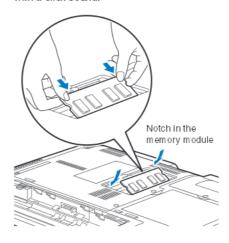

Attach the memory compartment cover and secure it with screws.

Attach the cover removed in step 3.

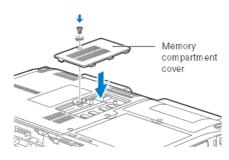

Checking the memory capacity



∅ IMPORTANT:

- If the memory is not installed correctly, an error message "Expansion memory error" may be displayed when you turn on the notebook. If such a message appears, turn off the notebook, remove the memory module and reinstall it.
- 1. Turn on the notebook.
- Click the Start button and select Control Panel.

The Control Panel window appears.

- Click System and Maintenance.
- Click System.
- Check whether the numeric value has increased by the size of the memory you have added.

The notebook specifications may vary between countries, please check with your local distributor for actual configuration.



POINT


- If the numeric value displayed does not agree with the memory capacity of your notebook, check the newly installed memory module.
- However, in the case of a system with integrated graphics solutions, or shared graphics solutions that utilizes a portion of a computer's system RAM, the total memory size available to the Operating System will be less than the size of installed memory module(s).

Changing memory module

The memory module installed on your notebook can be replaced with a larger size of memory.

- 1. Turn off the notebook and disconnect the AC adapter from it.
- 2. Close the LCD panel and place the notebook upside down.
- Remove the screw(s) securing the memory compartment cover and remove


Remove memory compartment cover at the bottom of the notebook.

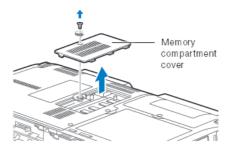

* To locate the position of the Expansion RAM Module Slot, please refer to page 6.


4. Remove the memory module.

Displace the hook on each side from the memory module. The memory module comes up slightly. Pull the memory module diagonally up to detach it from the slot.

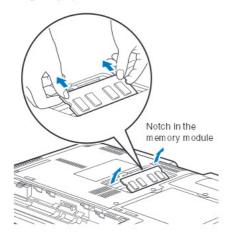

6. Attach the memory compartment cover.

Attach the cover removed in step 3.

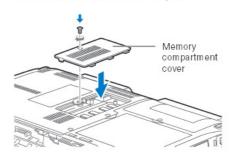


1

POINT-

 After you have installed or remove a memory module, check the memory capacity of you notebook to verify that the memory module is installed properly.

5. Install a new memory module.

Insert the memory module diagonally into the slot with the notch in the memory module aligned with the projection on the connector. Push memory module down until it clicks into place.

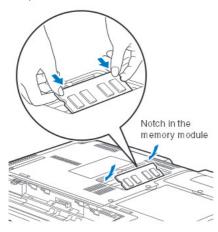

Cleaning of Air-Cooling Duct

Your notebook is equipped with fans to draw air from the outside creating an airflow to cool the inside of your notebook. Depending on the environment where your notebook is used, dust and dirt may be drawn in together with the air flow. The accumulated dust and dirt may impair the proper functioning of your notebook.



№ IMPORTANT

Ventilate your room environment.

To avoid inhaling the dust, please ventilate the room by opening the windows or running a ventilating fan.



Pay attention to the following.

- Do not use detergent or solvents to clean the air-cooling duct.
- Please handle with care when you are cleaning the air-cooling duct.
- Use only plastic tools for cleaning. Hard metal or frangible wooden tools may cause damage.
- Please note that repairing cost is chargeable if the damage to parts is caused by the cleaning procedure, even if the notebook is still under warranty.



Static electricity.

Components inside the notebook are very sensitive to static electricity and they may be damaged by static electric charges in the human body. Before cleaning the air-cooling duct, touch any metallic object to discharge the static charges from your body.

1. Turn off the notebook and disconnect the AC adapter from it.



A WARNING

 
Remove AC adapter.

- To prevent an electric shock, turn off the notebook and other peripheral devices and then disconnect the AC adapter from the notebook.
- 2. Close the display panel gently and turn your notebook up with the bottom panel facing up.

Ensure there is nothing between the display panel and keyboard before closing the display panel.

3. Remove the Dust Catcher.


Press the latch toward the dust catcher and lift it up.



4. Cleaning the dust catcher and the air-cooling duct.


Carefully remove the dust and dirt trapped in the duct and on the dust catcher.

 Be careful not to scratch or damage the metal parts.



5. Install the dust catcher.

 Insert the end of the dust catcher without latch first and push the entire dust catcher in until it locks in place with a click sound.



CAUTION-

 Do not use notebook without installing the dust catcher, it may cause damage to your computer.

TROUBLESHOOTING

Your Fujitsu LifeBook notebook is sturdy and undergoes stringent reliability tests. However, you may encounter simple setup or operating problems that you can solve on the spot or problems with peripheral devices, that you can solve by replacing the device. The information in this section helps you isolate and resolve some of these straightforward problems and identify failures that require service.

Identifying the Problem

If you encounter a problem, go through the following procedure before pursuing complex troubleshooting:

- 1. Turn off your LifeBook notebook.
- Make sure the AC adapter is plugged into your notebook and to an active AC power source.
- Make sure that any card installed in the PC Card slot is seated properly. You can also remove the card from the slot, thus eliminating it as a possible cause of failure.
- Make sure that any devices connected to the external connectors are plugged in properly. You can also disconnect such devices, thus eliminating them as possible causes of failure.
- Turn on your notebook. Make sure it has been off at least 10 seconds before you turn it back on
- 6. Go through the boot sequence.
- If the problem has not been resolved, refer to the Troubleshooting Table that follows for more detailed troubleshooting information.

 If you have tried the solutions suggested in the Troubleshooting Table without success, contact your support representative.

Before you place the call, you should have the following information ready so that the customer support representative can provide you with the fastest possible solution:

- Product name
- · Product configuration number
- · Product serial number
- · Purchase date
- Conditions under which the problem occurred
- · Any error messages that have occurred
- · Hardware configuration
- · Type of device connected, if any

See the Configuration Label on the bottom of your notebook for configuration and serial numbers.

Specific Problems

Using the Troubleshooting Table

When you have problems with your LifeBook notebook, try to find the symptoms under the Problem column of the troubleshooting table. You will find a description of common causes for that symptom under the column Possible Cause. Follow the instructions on the Possible Solution column to resolve the problem. All possible causes or solutions may not apply to your notebook.



POINT-

If you keep notes about what you have tried, your support representative may be able to help you more quickly by giving additional suggestions over the phone.

Troubleshooting Table

Problem	Possible Cause	Possible Solution		
Audio Problem	Audio Problem			
There is no sound coming from the built-in speakers.	The software volume control is set too low.	Adjust the sound volume control settings in your software, operating system and applications.		
	Headphones are plugged into your notebook.	Plugging in headphones disables the built-in speakers, remove the headphones.		
	BIOS audio settings are incorrect.	Set the BIOS setup utility to the default values within the Multimedia Device Configuration menu.		
	Software driver is not configured correctly.	Refer to your application and operating system documentation for help.		
	The speakers have been muted using the Volume icon in the system tray.	Click on the Volume icon in the tool tray on the bottom right of the screen. (It looks like a speaker). If the Mute box is checked, click on it to uncheck it.		
DVD/CD-RW/CD-R	OM Drive Problems			
LifeBook notebook fails to recognize DVD/CD-RW/ CD- ROM's.	Protective sheet is still in the DVD/CD-RW/CD-ROM drive tray.	Remove the protective sheet from the DVD/CD-RW/CDROM drive tray.		
HOM'S.	DVD/CD-RW/CD-ROM is not pushed down onto raised center circle of the drive.	Open DVD/CD-RW/CD-ROM tray and reinstall DVD/CD-RW/CD-ROM properly.		
	DVD/CD-RW/CD-ROM tray is not latched shut.	Push on the front of the DVD/CD-RW/CD-ROM tray until it latches.		
	Incorrect DVD Player or no DVD Player software is installed.	Install DVD Player software.		

Problem	Possible Cause	Possible Solution	
DVD/CD-RW/CD-R	DVD/CD-RW/CD-ROM Drive Problems		
LifeBook notebook fails to recognize DVD/CD-RW/ CD- ROM's. (continued)	Wrong drive designator was used for DVD/CD-RW/CD-ROM in the application.	Verify the drive designator used by the application is the same as the one used by the operating system. When the operating system is booted from a DVD/CD, drive designations are automatically adjusted.	
	Windows DVD/CD-RW/ CD-ROM auto insertion function is disabled.	Start the DVD/CD-RW/CD-ROM from the desktop or application software or re-enable the Windows DVD/CD-RW/CD-ROM auto insertion function.	
	DVD/CD-RW/CD-ROM is dirty or defective.	Wipe DVD/CD-RW/CD-ROM with a non- abrasive CD cleaning cloth and reinsert. If it still does not work, replace a new DVD/CD- RW/CD-ROM in the drive.	
The DVD/CD-RW/CD-ROM Access indicator on the Status Indicator Panel blinks at regular intervals when no DVD/CD-RW/CD-ROM is in the tray or the optical drive is not installed.	The Windows DVD/ CD-RW/CD-ROM auto insertion function is active and is checking to see if a DVD/CD-RW/CD-ROM is ready to run.	This is normal. However, you may disable this feature.	

Problem	Possible Cause	Possible Solution	
Floppy Disk Drive	Floppy Disk Drive Problems		
You cannot access your floppy disk.	You tried to write to a write protected floppy disk.	Eject the floppy disk and set it to write enable.	
	Floppy disk is not loaded correctly.	Eject floppy disk, check orientation and reinsert.	
	The floppy disk drive may not be properly installed.	Remove and re-install your floppy disk drive.	
	Security is set to protect access to floppy disk data.	Verify your password and security settings.	
Hard Drive Probler	ns		
You cannot access your hard drive.	The setup utility is incorrectly set for your internal (Primary Master) or optional second hard drive (Primary Slave).	Revise BIOS settings to set both Primary Master and Primary Slave correctly.	
	The wrong drive designator was used by an application when a bootable CD-ROM was used to start the notebook.	Verify drive designator used by application is in use by the operating system. When the operating system is booted from a CD, drive designations are automatically adjusted.	
	Security is set so your operating system cannot be started without a password.	Verify your password and security settings.	
Keyboard or Mouse Problems			
The built-in keyboard does not seem to work	The notebook has gone into Suspend mode.	Push the Power/Suspend/Resume button.	
not seem to work.	Your application has locked out your keyboard.	Try to use your integrated pointing device to restart your system.	

Possible Cause	Possible Solution
e Problems	
Your external device is not properly installed.	Re-install your device.
Your operating system software is not setup with the correct software driver for that device.	Check your device and operating system documentation and activate the proper driver.
Your mouse or keyboard is connected to the wrong PS/2 port on the optional Port Replicator.	Plug the mouse into the PS/2 Mouse port and the external keyboard or numeric key pad into the PS/2 Keyboard port.
Your operating system software is not setup with the correct software driver for that device.	Check your device and operating system documentation and activate the proper driver.
Your system has crashed.	Try to restart your notebook.
Your memory upgrade module is not properly installed.	Remove and re-install your memory upgrade module.
You have a memory failure.	Check for Power On Self Test (POST) messages.
Messages about modem operation are generated by whichever modem application is in use.	See your application software documentation for additional information.
	e Problems Your external device is not properly installed. Your operating system software is not setup with the correct software driver for that device. Your mouse or keyboard is connected to the wrong PS/2 port on the optional Port Replicator. Your operating system software is not setup with the correct software driver for that device. Your system has crashed. Your memory upgrade module is not properly installed. You have a memory failure. Messages about modem operation are generated by whichever modem

Problem	Possible Cause	Possible Solution		
PC Card Problems	PC Card Problems			
A card inserted in the PC Card slot does not work or is locking up the system.	The card is not properly installed.	Remove and re-install the card.		
	The card may have been installed while an application was running, so your notebook is not aware of its installation.	Close the application and restart your notebook.		
	Your software may not have the correct software driver active.	See your software documentation and activate the correct driver.		
	You may have the wrong I/O address selected for the activated PC Card.	See your PC Card documentation to determine the required I/O address. Change the settings in the BIOS.		
	Your PC Card device and another device are assigned the same I/O address.	Check all I/O addresses located within the BIOS setup utility and any other installed hardware or software to make sure there are no duplications.		
Power Failures				
You turn on your LifeBook note- book and nothing seems to happen.	The installed primary battery is completely discharged, there is no optional second battery installed or there is no Power adapter (AC adapter) installed.	Check the Status Indicator Panel to determine the presence and condition of the batteries. Install a charged battery or a Power adapter.		
	The primary battery is installed but is faulty.	Use the Status Indicator panel to verify the presence and condition of the batteries. If a battery is indicating a short, remove that battery and operate from another power source or replace that battery.		
	The battery or batteries are low.	Check the Status Indicator Panel to determine the presence and condition of the batteries. Use a Power adapter to operate until a battery is charged or install a charged battery.		
	The power adapter (AC adapter) is not plugged in properly.	Verify that your adapter is connected correctly.		

Problem	Possible Cause	Possible Solution
Power Failures		
You turn on your LifeBook notebook and nothing	The power adapter (AC adapter) has no power from the AC outlet.	Move the AC cord to a different outlet, check for a line switch or tripped circuit breaker for the AC outlet.
seems to happen.	The power adapter (AC adapter) is faulty.	Try a different power adapter or install a charged optional second battery.
Your LifeBook notebook turns off all by itself.	The power management parameters are set for auto timeouts which are too short for your operating needs.	Press any button on the keyboard, or move the mouse to restore operation. If that fails, push the Power/Suspend/Resume button. Check your power management settings, or close your applications and go to the Power Options menu to adjust the timeout values to better suit your needs.
	You are operating on battery power only and have ignored a low battery alarm until the batteries are all power drained empty and your machine has gone into Dead Battery Suspend mode.	Install a power adapter or a charged battery and then push the Power/Suspend/Resume button.
	You have a battery failure.	Verify the condition of the batteries using the Status Indicator Panel, and replace or remove battery that is shorted
	Your power adapter has failed or lost its power source.	Make sure the adapter is plugged in and the outlet has power.

Problem	Possible Cause	Possible Solution
Power Failures		
Your LifeBook notebook will not	The installed batteries are dead.	Replace the battery with a charged one or install a Power adapter.
work on battery alone.	No batteries are installed.	Install a charged battery.
	The batteries are improperly installed.	Verify that the batteries are properly connected by re-installing them.
	Your installed batteries are faulty.	Verify the condition of the batteries using the Status Indicator panel and replace or remove any batteries that are shorted.
The batteries seem to discharge too quickly.	You are running an application that uses a great deal of power due to frequent hard drive access or DVD/CD-ROM access, use of a modem card or a LAN PC card.	Use both the primary battery and an optional second battery and/or use a power adapter for this application when at all possible.
	The power savings features may be disabled.	Check the power management and/or setup utility settings in the Power Savings menu and adjust according to your operating needs.
	The brightness is turned all the way up.	Turn down the brightness adjustment. The higher the brightness the more power your display uses.
	The batteries are very old.	Replace the batteries.
	The batteries have been exposed to high temperatures.	Replace the batteries.
	The batteries are too hot or too cold.	Restore the notebook to normal operating temperature. The Charging icon on the Status Indicator panel will flash when the battery is outside its operating range.

Problem	Possible Cause	Possible Solution	
Shutdown and Sta	Shutdown and Startup Problems		
The Suspend/ Resume button does not work.	The Suspend/Resume button is disabled from the Advanced submenu of the Power menu of the setup utility.	Enable the button from the setup utility.	
	You did not hold the button in long enough.	Hold the button longer. This may need to be a few seconds if your application is preventing the CPU from checking for button pushes.	
	There may be a conflict with the application software.	Close all applications and try the button again.	
The system powers up, and displays power on information, but fails to load the	The boot sequence settings of the setup utility are not compatible with your configuration.	Set the operating source by pressing the [ESC] key while the Fujitsu logo is on screen or use the [F2] key and enter the setup utility and adjust the source settings from the Boot menu.	
operating system.	You have a secured system requiring a password to load your operating system.	Make sure you have the right password. Enter the setup utility and verify the Security settings and modify them as accordingly.	
	Internal hard drive was not detected.	Use the BIOS setup utility or Primary Master submenu, located within the Main menu, to try to auto detect the internal hard drive.	
An error message is displayed on the screen during the notebook (boot) sequence.	Power On Self Test (POST) has detected a problem.	See the Power On Self Test (POST) messages to determine the meaning and severity of the problem. Not all messages are errors; some are simply status indicators.	

Problem	Possible Cause	Possible Solution		
Shutdown and Sta	Shutdown and Startup Problems			
Your notebook appears to change setup parameters when you start it.	BIOS setup changes were not saved when you made them and exited the BIOS setup utility returning it to pevious settings.	Make sure you select Save Changes And Exit when exiting the BIOS setup utility.		
	The BIOS CMOS hold-up battery has failed.	Contact your support representative for repairs. This is not a user serviceable part but has a normal life of 3 to 5 years.		
Your system display won't turn on when the system is turned on or when the system has resumed.	The system may be password-protected.	Check the status indicator panel to verify that the Security icon is blinking. If it is blinking, enter your password.		
Video Problems				
The built-in display is blank when you turn on your LifeBook notebook.	Something is pushing on the Closed Cover switch.	Clear the Closed Cover switch.		

Problem	Possible Cause	Possible Solution
Video Problems		
The built-in display is blank when you turn on your LifeBook notebook. (continued)	The notebook is set for an external monitor only.	Pressing [F10] while holding down the [Fn] key allows you to change your selection of where to send your display video. Each time you press the combination of keys you will step to the next choice. The choices, in order are: built-in display only, external monitor only, both built-in display and external monitor.
	The angle of the display and the brightness settings are not adequate for your lighting conditions.	Move the display and the brightness control until you have adequate visibility.
	The power management time-outs may be set for very short intervals and you failed to notice the display come on and go off again.	Press any button the keyboard, or move the mouse to restore operation. If that fails, push the Power/Suspend/Resume button. (The display may be shut off by Stanby mode, Auto Suspend or Video Timeout)
The LifeBook notebook turned on with a series of beeps and your built-in display is blank.	Power On Self Test (POST) has detected a failure which does not allow the display to operate.	Contact your support representative.
The display goes blank by itself after you have been using it.	The notebook has gone into Video Timeout, Standby mode, Suspend mode or Save-to-Disk mode because you have not used it for a period of time.	Press any button on the keyboard, or move the mouse to restore operation. If that fails, push the Power/Suspend/Resume button. Check your power management settings, or close your applications and go to the Power Savings menu of the setup utility to adjust the timeout values to better suit your operation needs.
	The power management time-outs may be set for very short intervals and you failed to notice the display come on and go off again.	Press any button on the keyboard, or move the mouse to restore operation. If that fails, push the Power/Suspend/Resume button. (The display may be shut off by Standby Mode, Auto Suspend or Video Timeout)
	Something is pushing on the Closed Cover switch.	Check the Closed Cover switch.

Problem	Possible Cause	Possible Solution	
Video Problems			
The application display uses only a portion of your screen and is surrounded by a dark frame.	You are running an application that does not support 800 x 600/1024 x 768 pixel resolution display and display compression is enabled.	Display compression gives a clearer but smaller display for applications that do not support 800 x 600/1024 x 768 pixel resolution. You can fill the screen but have less resolution by changing your display compression setting, (See the Video Features submenu, located within the Advanced menu of the BIOS.)	
The Display is dark when on battery power.	The Power Management utility default is set on low brightness to conserve power.	Press [Fn] + [F7] to increase brightness or double- click on the battery gauge and adjust Power Control under battery settings.	
You have connected an external monitor and it does not display any information.	Your BIOS setup is not set to enable your external monitor.	Try toggling the video destination by pressing [Fn] and [F10] together, or check your BIOS setup and enable your external monitor. (See the Video Features submenu, located within the Advanced Menu of the BIOS.)	
	Your external monitor is not properly installed.	Reinstall your device.	
	Your operating system software is not setup with the correct software driver for that device.	Check your device and operating system documentation and activate the proper driver.	
You have connected an external monitor and it does not come on.	Your external monitor is not compatible with your LifeBook notebook.	See your monitor documentation and the External Monitor Support portions of the Specifications section.	
Miscellaneous Problems			
An error message is displayed on the screen during the operation of an application.	Application software often has its own set of error message displays.	See your application manual and help display screens for more information. Not all messages are errors. Some may simply be status messages.	